

## PROGRAM YOUR REMOTE FOR TV

If your home entertainment device does not respond to the Potenza ST Universal Remote Control after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

For example, to search for a code for your TV:

1. Turn on your TV.
2. On the remote control, press **TV** once; it will blink once. Then press and hold **SETUP** until the **TV** key blinks twice.
3. Type **9 9 1**. The **TV** key will blink twice.
4. Aim the remote control at the TV and press **POWER** once.
5. Press and release the **CH+** key continuously, then stop when the TV turns off. Be patient as this may take several minutes to find the correct code.

**NOTE:** In the search mode, the remote control will send IR codes from its library to the selected device, starting with the most popular code first.

6. Press **POWER**. The TV should turn on, then press **SETUP** once to lock in the code. The LED will blink twice to indicate that the code is saved.

**NOTE:** If the TV does not turn on during step 6, then slowly press and release **CH-** to go back through the codes, then press **SETUP** when the TV turns on.

7. To search for the codes of your other devices, repeat steps 1 through 6, but substitute the appropriate key (e.g., **VCR**, **DVD**, **AUD**, or **STB**) for the device you are searching for.