

PROGRAMMING YOUR REMOTE



1 Turn on your TV.

2 With your Hartelco remote, press the TV button once, it will blink once.

3 Press and hold SETUP button until the TV key blinks twice.

4 Type **9-9-1**. The TV key will blink twice.

5 Press POWER button once.

6 Press and release the CH up (CH +) button repeatedly, do this step kind of slowly. Then stop when the TV turns off. Be patient, this may take several minutes to find the correct code.

7 Press POWER. The TV should turn on, and then press and hold SETUP button once to lock in the code. The TV button will blink twice to indicate the code is saved.

*NOTE: If the TV does not turn on during step 6, then slowly press and release CH- to go back through the codes, then press **SETUP** when the TV turns on.*

To search for the codes of your other devices, repeat steps 1-7, but substitute the appropriate key (e.g., VCR, DVD, AUD, or STB) for the device you are searching for.